



SOLARVAC
UNIT 3, 37 HOWE STREET
OSBORNE PARK W.A. 6017
PH: 9244 4611 FAX: 9446 7339

OPERATING INSTRUCTIONS SYSTEM 2 INTERCOM SYSTEM

1. THE FRONT DOOR STATION

The front door station consists of a plate with an illuminated push button. When the button is depressed a call tone will be heard out of each room station.

2. ROOM STATIONS

The room stations consist of a plate with 3 push buttons labelled as follows:

PA
FD
LK

3. **PA** This button , when pressed allows you to talk to the other room station. Keeping the button depressed speak at normal voice level approximately 100mm from room station plate then release button when finished speaking. Your voice will be heard through the other room station. The person in the other room can then talk back to you using the same method.
4. **FD** This button , when pressed allows you to talk to the front door station. When you release this button you will automatically be able to hear the person at the front door with out them having to press any buttons. A short period of time after the FD button is released the front door station will the switch off.
5. **LK** This button , when pressed energizes the electric latch (if fitted) at the front door allowing people to enter. When this button is released the latch is de-energized returning to its normal state.

** To avoid damaging the finish of the intercom plates do not use abrasive or harsh cleaning products.